


C360 / C365

User Guide

Safety Instructions

- DO NOT look into the light source. Be cautious of the high-intensity beam.
- DO NOT disassemble C360/C365. This will void the warranty.
- DO NOT install C360/C365 in damp or wet locations.
- DO NOT install C360/C365 less than 6 inches from any curtains or combustible materials.
- DO NOT obstruct the fixture's air vents.
- Use safety cable (not included) when rigging C360/C365 overhead.
- Make sure to follow local building codes when installing C360/C365.
- Only use Fiilex approved power supply and accessories. Failure to do so may damage the fixture.

Parts Diagram

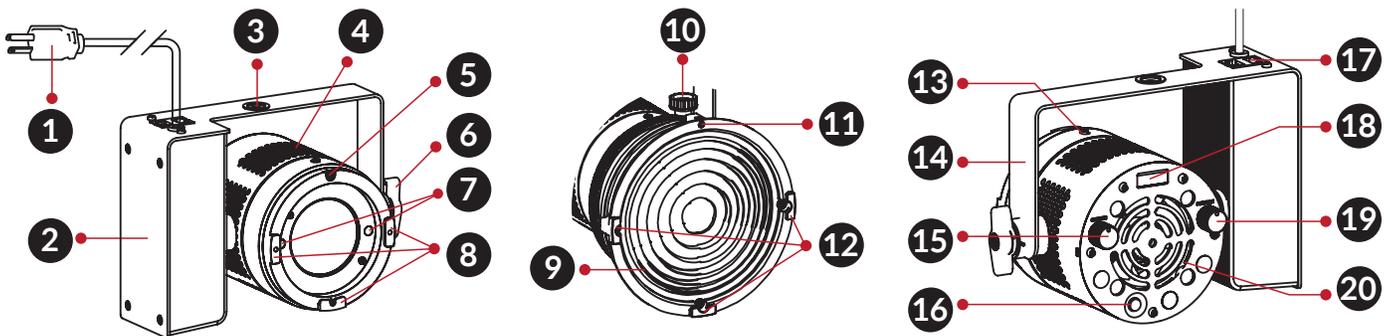

1. Power Cord
2. Power Module Box
3. Size M12 Screw Receiver
4. Side Vents
5. Barndoor Lock
6. Yoke Knob
7. Magnetic Accessory Lock

8. Barndoor Slot
9. 5" Fresnel Zoom Lens (C365 only)
10. Lens Tighten Knob (C365 only)
11. Barndoor Lock (C365 only)
12. Barndoor Slot (C365 only)
13. Barndoor Lock Release
14. Yoke

15. CCT / HUE Knob
16. On / Off Button
17. RJ45 In / Out
18. OLED Display
19. Intensity / DMX Knob
20. Rear Vents

Indicator Light

On/Off Button (15)	Mode	Description
 Red	Manual Control	Fixture is off and receiving power. Light settings can be adjusted via manual control knobs.
 Green	Manual Control	Fixture is on.
 Orange	DMX Control	Fixture is receiving DMX control signal. Manual control knobs are disabled while DMX is active.

Fixture Settings

Intensity	Turn the Intensity Knob (19) to adjust brightness.
CCT	Turn the CCT Knob (15) to adjust color temperature.
HUE (Magenta/Green)	Double click the HUE Knob (15) to access HUE setting.
DMX Control	Double click the DMX Knob (19) to set a DMX address (Range: 1 - 510). When a DMX address is selected, the fixture will automatically assign the next addresses in the following order: 1. Intensity 2. CCT 3. HUE